


How to assemble a wooden and plastic frame

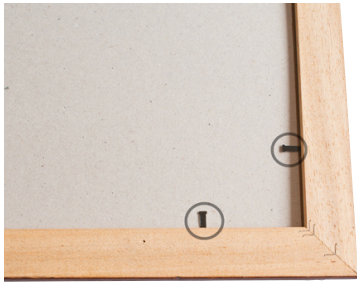

Fold all the metal stands at the back of the frame



Carefully remove the glass and cardboard from the frame


Insert your artwork between the glass and cardboard



Just as you removed it, put the cardboard, artwork and glass back in the frame



Thoroughly lock all metal stands at the back of the frame

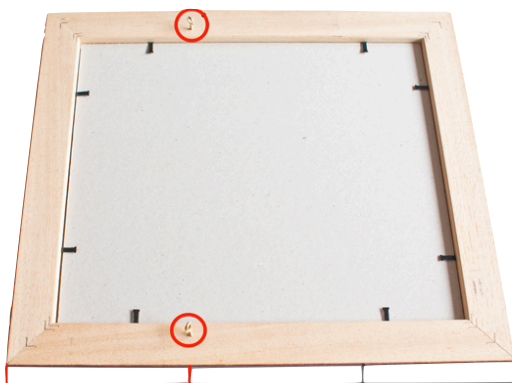

Screw hooks 1/3 from the upper edge of the frame



Insert and tighten the wire in the hooks so that it is parallel to the upper edge of the frame