

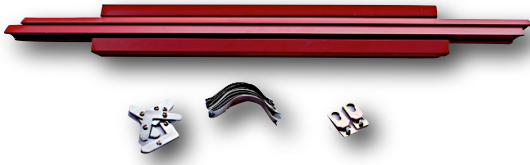



# How to assemble an aluminum frame

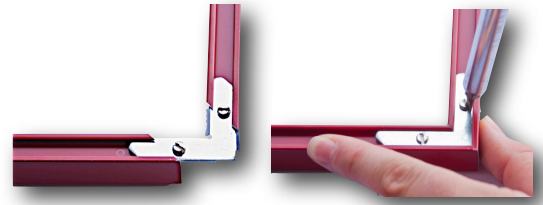

Aluminum frame kit includes: frame, springs, corner fasteners, hooks, wire and possibly cardboard and glass


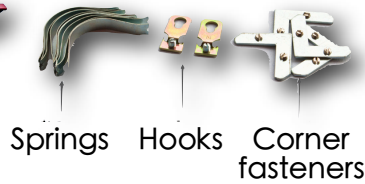


Slide in corner fasteners in bottom corners, pinch edges together and tighten the screws

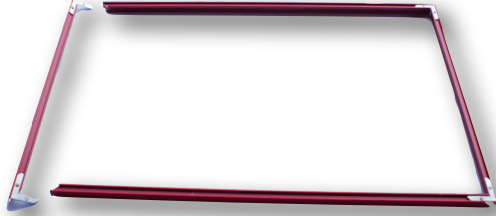

When the hooks are placed in the frame, they are attached 1/3 from the upper edge of the frame

In this example, the frame will stand upright, so one of the short edges of the frame is left open to insert the hooks

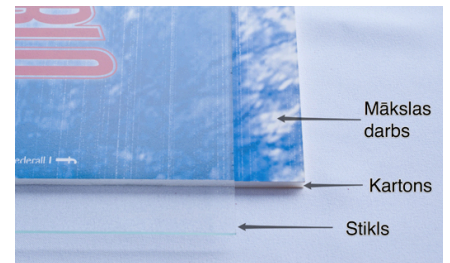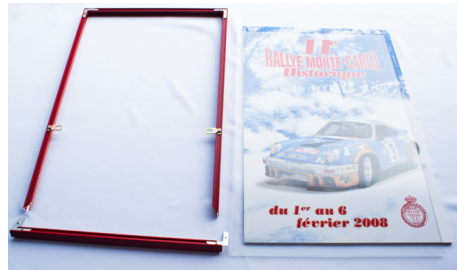

Place the artwork between the glass and cardboard




Slide in the open edge of the frame all three simultaneously - glass, artwork and cardboard



Once done, screw together the remaining two corners



Springs lay in proportion, as shown in the picture, at the back of the frame

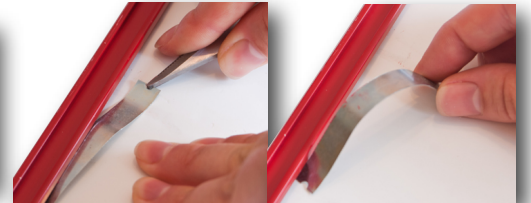

Click on the curvature of the spring so that it lies flat and is easily placed between the frame and the cardboard, thus strengthening the artwork

If a spring needs to be removed, then with scissors or a screwdriver, hook behind one of the edges of the spring to take it out



Insert and tighten the wire in the hooks so that it is parallel to the upper edge of the frame

Your frame is ready to be hung on a wall!

